

USER MANUAL

THUNDER BOLT W/SOUND

 
Mod. LT3

It is very important to operate this product according to the following instructions. Failure to do so may render your guarantee void.

CONTENTS:

- 1 x Thunder Bolt Projector
- 1 x Bracket
- 1 x Power Adapter
- 1 x Screw
- 1 x Stake
- 1 x User Manual
- 1 x Screw Nut
- 1 x Stand

Names for Parts:

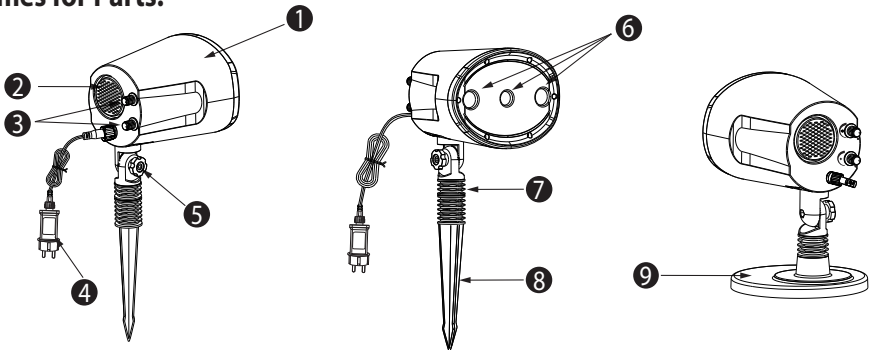

- 1. Main Unit
- 2. Speaker
- 3. Function Knob
- 4. Power Adapter
- 5. Screw
- 6. LED Aperture
- 7. Bracket
- 8. Stake
- 9. Stand

SPECIFICATIONS:

- Power Input: 220-240V ~ 50Hz
- Materials: ABS, PP
- Working Temperature: -30°C (-22°F) to 35°C (96°F)
- Dimension: 116 x 138 x 99mm
- IP Protection: IP65 for the unit, IP44 for the adapter
- Light Features: thunder bolt with sound
- Indoor and Outdoor Use
- Power Output: 5V = 1000mA
- Stake Height: 7.09 inches (180 mm)

Quick Setup:

1. Remove all the components from packaging and saving packaging to store the projector light when not in use. Please make sure that there are 1 x Thunder Bolt Projector, 1 x Screw, 1 x Screw Nut, 1 x Bracket, 1 x Stake, 1 x Stand, 1 x Power Adapter and 1 x User Manual in the packaging.

2. Install the projector light:

- For optimal coverage, find a location where is no obstructions between the projector light and its projection surface.
- Fix the bracket into the projector light with screw, and then insert the stake or stand to the bracket in the right way.

Attention: Please be sure the projector light is unplugged before installation.

• Installation:

- (A) Insert the pointer on top of the stake vertically into the earth by holding the top of stake.
(Icon A)

 
 
 
 
 
Attention: Never attempt to push or pound at the stake if the earth is too hard.

- (B) Screw the bracket into the stake. (Icon B)

- (C) Fix the projector light on the bracket with screw and adjust to the appropriate angle. (Icon C)

Important: Please use stand instead of stake, when you try to use indoor or hard ground.


- (D) Connect the adapter to a power socket when ready to use. Unplug when not in use. (Icon D, E)

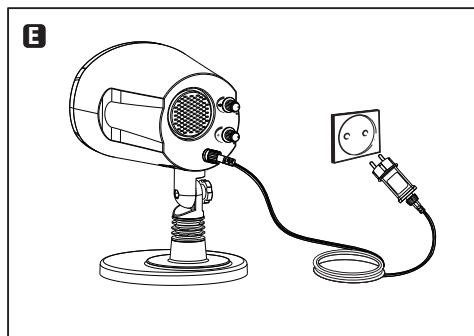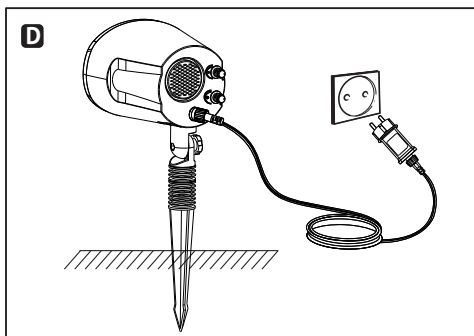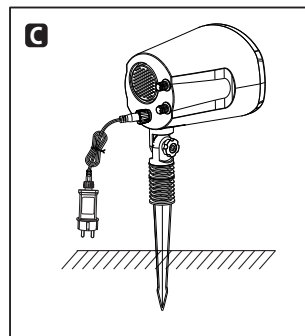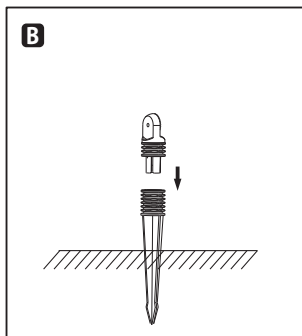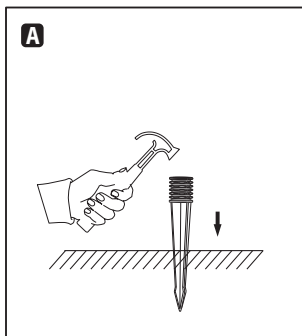

Note: The darker the area the light being used in, the brighter the projection. Try to stay away from areas with bright illuminating lights.

Operate the Function Knob

 1. Twist "Thunder" knob clockwise to turn up the sound, anticlockwise to turn down the sound or close
2. Twist "Lightning" knob clockwise to increase the brightness, anticlockwise to decrease the brightness or close

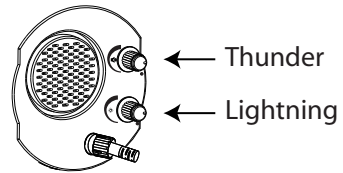

Built-in Timer

The device is designed to automatically shut off after 6 hours lights working, and it will go into sleep mode for 18 hours and repeat the same operation thereafter.

NOTICE: The auto timer function will start to work once the light is plugged. If the user turns it off and turns on again working in the dark, the timer will re-start to work.

IMPORTANT SAFETY INSTRUCTIONS

1. No recommended for set-up or installation by children. As with all electrical products, exercise caution during handling and use to reduce the risk of electric shock. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. To reduce the risk of burns, fire, electric shock, or injury to persons, unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Keep the cord away from heaters or other heated surfaces.
6. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
7. To disconnect, turn all controls to the off position, then remove plug from power socket.
8. The furnishing has not been evaluated for flammability or cigarette ignition resistance!
9. Route the power supply cord away from walkways, driveways and traffic areas to prevent trip hazards and damage to the power supply cord.
10. Do not shake.

11. ONLY ALLOW USE BY RESPONSIBLE PERSONS

- This is not a toy.** Children can safely use the projector light only with continuous adult supervision.
12. This item was designed for indoor and outdoor use.
 13. This seasonal use product is not intended for permanent installation or use.
 14. Unplug the product when leaving the house, then retiring for the night, or if left unattended.

IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources! If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. Leave the device switched off until it has reached room temperature. Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are subject to warranty. Keep young children and amateurs away from the device!

PRECAUTIONS

1. To reduce the risk of fire or shock hazard, use the projector light only with specifically designated extension cord. Do not expose this appliance to rain or moisture.
2. This item for Household Use Only
3. This projector light should be used at allowed working temperature: -30°C(-22°F) to 35°C(96°F).

Maintenance and Cleaning

- Maintenance and cleaning shall only be done to the product surface. Unplug this product from the power socket before cleaning.
- Do not wet any electric parts of this product. Please use a dry, soft cloth instead of sharp tools for cleaning.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- Please keep away from heaters and other heating sources.

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.



Imported by
FRISA PRESEPI Srl
Via Ceccaroni, sn – Recanati (MC)
ITALY
P.IVA: 01947790430